

GROVE

OPERATOR'S MANUAL

This manual has been prepared for and is considered part of -

RT540E

Crane Model Number

This Manual is divided into the following sections:

SECTION 1	INTRODUCTION
SECTION 2	SAFETY INFORMATION
SECTION 3	OPERATING CONTROLS AND PROCEDURES
SECTION 4	SET-UP AND INSTALLATION
SECTION 5	LUBRICATION
SECTION 6	MAINTENANCE CHECKLIST

NOTICE

The crane serial number is the only method your distributor or the factory has of providing you with correct parts and service information.

The crane serial number is identified on the builder's decal attached to the operator's cab. **Always furnish crane serial number** when ordering parts or communicating service problems with your distributor or the factory.



WARNING

To prevent death or serious injury:

- Avoid unsafe operation and maintenance.
- This crane must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.
- Do not operate or work on this crane without first reading and understanding Operator's Manual and Rating Plate supplied with crane.
- Store Operator's Manual in holder provided on crane.
- Attach laminated Capacity Charts supplied with crane to chain in operator's cab.
- If Operator's Manual or Capacity Charts are missing from cab, contact your distributor for new ones.