

F 480A.24

use and maintenance

FROM SERIAL NUMBER *3001*

INDEX OF PARAGRAPHS

A0	INTRODUCTION
B0	SAFETY NORMS
C0	WARNING AND INSTRUCTIONS
C0.1	Before operating
C0.2	During operation
C0.3	At the end of the operation (Prior to driving the vehicle)
D0	CLASSIFICATION OF THE CRANE MODEL
D0.1	Technical data
D1	IDENTIFICATION OF THE CRANE MODEL
D1.1	☛☛ Crane mark
D1.2	Crane mark
E0	CRANE NOMENCLATURE
E0.1	Crane with ground controls
E0.2	Crane with top seat controls and with ground controls for outriggers
F0	☛☛ NOMENCLATURE OF THE SAFETY AND PROTECTION DEVICES
F0.1	Crane with ground controls
F0.2	Crane with top seat controls and with ground controls for outriggers
F1	NOMENCLATURE OF THE SAFETY AND PROTECTION DEVICES
F1.1	Crane with ground controls
F1.2	Crane with top seat controls and with ground controls for outriggers
G0	SUPPLEMENTARY BEAMS
G0.1	Identification of the supplementary beams
G1	TILTABLE OUTRIGGER RAMS
G2	MANOEUVRES AND CONTROLS TO STABILIZE THE VEHICLE
G2.1	Functions of control levers for stabilization
G2.2	☛☛ Controls to stabilize the vehicle
G2.3	Bilateral controls to stabilize the vehicle